



**ECOGENICA**  
INNOVATION MEETS TECHNOLOGY

# Homeowner's Manual

## Model numbers

- **Eco-ZR02FC**  
(Ecogen290-5)
- **Eco-ZR03FC**  
(Ecogen290-8)
- **Eco-ZR04FC**  
(Ecogen290-11)
- **Eco-ZR04FC 3 Phase**  
(Ecogen290-16)



### PLEASE NOTE :

- ✓ Installation, maintenance and any repairs must be undertaken by qualified persons.
- ✓ Adhere to the maintenance schedule and only use genuine spare parts.
- ✓ Always follow the safety instructions.
- ✓ Failure to comply with the instructions set out in this manual will invalidate the warranty.

# Thank you for choosing an Ecogenica heat pump!

As a leader in the Australian heat pump market, we are excited to bring our expertise and innovation to the UK and European markets.

We take pride in our dedicated R&D department and state-of-the-art factory, which allow us to create cutting-edge, environmentally conscious products.

The Ecogen290 range operates at maximum efficiency even in temperatures as low as -25°C, ensuring reliable and sustainable heating solutions to meet all your needs.

Our heat pumps use a refrigerant called R290, which is a natural and eco-friendly refrigerant. It has an extremely low Global Warming Potential (GWP) making it the most sustainable refrigerant available.

The use of R290 refrigerant not only ensures optimal performance and energy efficiency but also aligns with global efforts to reduce greenhouse gas emissions and combat climate change.

By choosing Ecogenica you have invested in a system that prioritizes both high efficiency and environmental responsibility.

This heat pump adheres to numerous rigorous design and manufacturing standards to ensure superior quality, exceptional reliability, and versatile functionality.

This manual provides you with the necessary information on how to operate and maintain your system and includes details of the warranty cover you have selected.

Please read this manual carefully. The manufacturer is not liable for injuries or damage resulting from improper installation, troubleshooting, or maintenance procedures that deviate from the guidelines outlined in this manual. All installation, maintenance, and repair work must be performed by qualified persons.

## What to do if you need help: ↘

Your heat pump system and its warranty are looked after by your installer. They will register the unit for warranty and maintain and support the unit and the heating system for its whole life. In all cases, please contact the installer below for advice on your system.

**Serial Number** :

**System Type (Open or Multi-Zone)** :

**Installer's Name** :

**Installer's Phone Number** :

**Installer's Email Address** :

If your installer is unable to assist you, please contact Ecogenica at [info@ecogenica.co.uk](mailto:info@ecogenica.co.uk) or on **0808 273 5159** and we will suggest a qualified installer local to you who can help you.

# Contents

|   |   |           |
|---|---|-----------|
| → | <b>Safety</b>                                   | <b>01</b> |
| → | <b>Running your Unit Efficiently</b>            | <b>05</b> |
| → | <b>System Types – Open Zone and Multi-Zone</b>  | <b>06</b> |
| → | <b>Operating an Open Zone System</b>            | <b>07</b> |
| → | <b>Operating a Multi-Zone System</b>            | <b>08</b> |
| → | <b>Setting the Clock, Controller and Timers</b> | <b>09</b> |
| → | <b>Checking System Performance</b>              | <b>10</b> |
| → | <b>Fault Codes</b>                              | <b>17</b> |
| → | <b>Warranty Cover</b>                           | <b>18</b> |
| → | <b>Maintenance Schedule</b>                     | <b>21</b> |
| → | <b>Wi-Fi App</b>                                | <b>22</b> |

# 01.

## Safety



Flammable



Poisonous



Danger



Electricity



No Smoking

This product contains the combustible refrigerant R290. If the refrigerant circuit leaks, the escaping refrigerant may mix with air to form a flammable atmosphere. If this happens, there is a risk of death from fire and explosion.

A **SAFETY ZONE** is defined for the area around this product. The safety zone requires a 300 mm clearance at the back, 1500 mm at the front and 300 mm on each side.

The designated **SAFETY ZONE** must be free of structural openings, such as windows, doors, light wells, skylights, and ventilation system air inlets or outlets.

R290 refrigerant, being denser than air, tends to sink and accumulate at ground level. Therefore, there must be no depressions or excavations within the **SAFETY ZONE**.

The **SAFETY ZONE** should not encroach upon intact buildings or public areas.

Once established, the **SAFETY ZONE** must not be altered in any way that contravenes established safety regulations.

Ensure that there are no ignition sources, electrical switches or other permanent ignition sources in the **SAFETY ZONE**.

Do not use any sprays or other combustible gases in the **SAFETY ZONE**. There is a risk of death if the product or the product environment is changed.

Do not make any changes to the: 

- Product itself
- Expansion relief valve for the heat source circuit
- Supply lines
- Constructional conditions that may affect the operational reliability of the product
- Drain pipework

There is a risk of injury and material damage due to maintenance and repairs carried out incorrectly or not carried out at all. Never attempt to carry out maintenance work or repairs on this product unless you are qualified to do so. Faults and damage should be immediately addressed and eliminated by a qualified person.

Adhere to the maintenance intervals specified.

There is a risk of material damage caused by freezing. Ensure that the heating installation always remains in operation during freezing conditions and that all rooms are sufficiently heated. If you cannot guarantee this, have a qualified person drain the heating installation.



## 02.

# Running your Unit Efficiently

## Heating



Your unit is designed to heat the house constantly in cold weather.

To maximise efficiency and reduce costs, we recommend setting the unit to run at a constant temperature 24 hours a day rather than running it for a few hours and then turning it off. If you do the latter, the unit will have to work very hard to bring the house up to temperature.

The unit is set to adjust the radiator temperature to suit the weather. When it is cold outside, the radiators will be warmer, and as it becomes milder outside, the radiators will drop in temperature. This is the most efficient way to run your system.

Your heat pump system is designed to drip-feed heat into the house and maintain a nice constant temperature.

## Hot Water



Ideally, you should set the unit to heat the cylinder when the electricity is cheapest. A hot cylinder will stay hot all day if not used.

Once a week, usually at night, the cylinder will heat up to 60C in order to protect you from Legionella.

Do not set your cylinder above 50C in normal operating conditions - 50C is far too hot for a bath or shower, and heating the water hotter costs more money.

## Running Costs



Your installer will give you an indication of the total annual running cost. Note that the cost varies enormously throughout the year. It is almost £0 in mid-summer (the heating is off) but much higher in January.

On average, in January, you will use 21% of all your heating energy. December, January and February represent 50% of the whole year's energy consumption. The heating works hard in winter.

If your heating costs you £10 on a very cold day in January when it is working flat out all day, this does not mean it will cost you £3,650 a year to run. A very cold day in January can easily consume 1% of the total heating energy for the year.

If your run costs are concerning you, measure your heat pump's electricity consumption regularly and give the data to your installer.

We offer 2 standard heating and hot water configurations – Open Zone and Multi-Zone.

You should know your system type – ask your installer if you do not.

## Essentially:

 


- If you are happy that all the radiators come on together when the heating is running and that you will have no thermostatic radiator valves, an open system is simpler and can offer significant savings in running costs.
- If, however, you want to divide the house into more than one heating zone and so have more than one thermostat, you must use a buffer tank and the Multi-Zone system.

## Open Zone Heating and Heat Water

In Open Zone systems, the controller is the only thermostat for the system, and no thermostatic radiator valves (TRVs) can be used on the radiators. There is no need for a buffer tank in an Open Zone system.

The basic configuration of an **Open Zone system** is as follows (red lines for hot water flows, blue for cold and green for electrical connections):

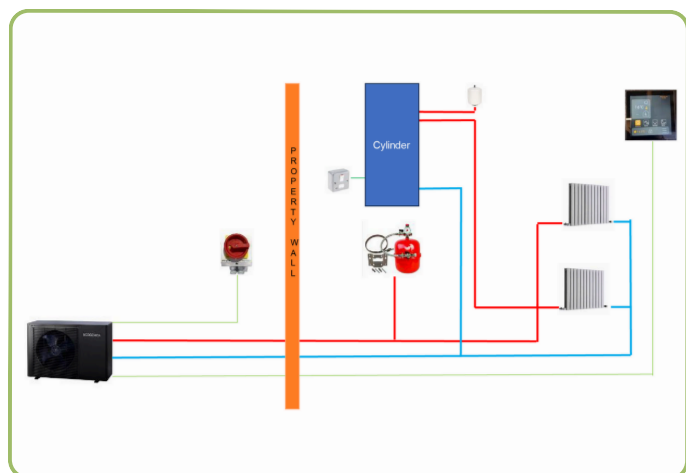 


## Multi-Zone Heating and Hot Water

If you want to zone the house or heat one floor, room or area at a time, you will need more than one thermostat, in which case you must have a buffer tank and a Multi-Zone system.

In the Multi-Zone system, the controller cannot be the room thermostat - room thermostats need to be installed, and thermostatic radiator valves are allowed on the radiators.

The basic configuration of the **Multi-Zone system** is as follows (red lines for hot water flows, blue for cold and green for electrical connections):

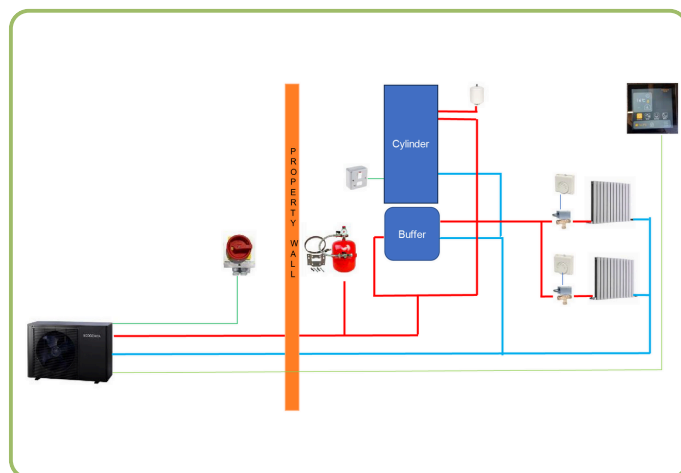

## 04.

# Operating Your System – Open Zone

In an Open Zone system, the controller should be located in a heated room within your home as it is your thermostat and time clock.

The controller will also have been programmed so it can see the hot water cylinder and should look like the below, with the heating on the left and the hot water on the right:



## Heating

- 01 Press the power button (⏻) on the left-hand side to switch the heating on/off.
- 02 Note the picture of the house (🏠) and the temperature, in this case 14C.
- 03 When the unit is off, it shows the current room temp, when it is running, it displays its target temperature.
- 04 The unit takes 2 minutes to start. Once it's running the house icon will go orange 🏠, to tell you it is in heating mode.
- 05 The current room temperature is displayed at the bottom of the controller screen in orange – 15.1C in the above.
- 06 To increase the room temperature press + and to reduce it press –.
- 07 At the top of the controller screen a circle with a triangle will appear (▶), this tells you the water pump is on.
- 08 After 3 minutes the compressor will appear top left in orange (🔧), now the heating is running.

Ensure the radiators are balanced properly i.e. they are all the same temperature. If any are cold you need to call the installer back to balance the system.

There should not be any thermostatic radiator valves on your radiators (although in some instances, a maximum of one TRV for every five radiators is permissible).

## Hot Water

- 01 Press the power button (⏻) on the right-hand side to switch the hot water on/off.
- 02 Note the picture of the (hot) water tap (🚰) and the temperature, in this case 17C. This tells you the current water tank/cylinder temperature.
- 03 When the unit is off, the screen shows the current cylinder temperature. When it is running, it displays the target temperature.
- 04 The unit takes 2 minutes to start. Once it's running the (hot) water tap icon will go orange 🚰 to tell you it is in hot water mode.
- 05 To increase the cylinder temperature, press + and to reduce it press –. We recommend setting this to 50C
- 06 Note the unit's priority is hot water - if the cylinder falls 5C in temperature, it will automatically re-heat. It cannot do heating and hot water at the same time so in hot water mode the heating is stopped.

Lastly, please note the hot water in the cylinder needs to heat up to 60C once a week to prevent Legionella and the immersion heater in the hot water cylinder is programmed to do this.

## 05.

# Operating Your System – Multi-Zone

In a Multi-Zone system, the controller does not have to be in a heated room since it is operating as the thermostat for your heating.

The installer will have given you room thermostats throughout the house to drive the heating.

If you try to use the controller, it will let you press on/off, but 10 seconds later, it will go back to where it was before.

Once you turn up any of your room thermostats, the unit takes 2 minutes to start. Once it's running, the house will go orange to tell you it is in heating mode.



At the bottom of the controller in Orange is the current room temperature - 15.1C in the photo below.





The controller will also be programmed to see the hot water cylinder.

It should look like the above, with the heating on the left and the hot water on the right.




## Heating

- 01 Turn any thermostat up in the house to signal the unit to start heating.
- 02 Note the picture of the house  and the temperature, in this case 14C.
- 03 When the unit is off, it shows the current room temp, when it is running, it displays its target temperature.
- 04 The unit takes 3 minutes to start. Once it's running the house icon will go orange  to tell you it is in heating mode.

- 05 The current room temperature is displayed at the bottom of the controller screen in orange – 15.1C in the above.
- 06 At the top of the controller screen a circle with a triangle will appear , this tells you the water pump is on.
- 07 After 3 minutes the compressor will appear top left in orange , now the heating is running.

Ensure the radiators are balanced properly, i.e. they are all the same temperature. If any are cold you need to call the installer back to balance the system.

## Hot water

 
- 01 Press the power button  on the right-hand side to switch the hot water on/off.
- 02 Note the picture of the (hot) water tap  and the temperature, in this case, 17C. This tells you the current water tank/cylinder temperature
- 03 When the unit is off, the screen shows the current cylinder temperature. When it is running, it displays the target temperature.
- 04 The unit takes 2 minutes to start. Once it's running the (hot) water tap icon will go orange  to tell you it is in hot water mode.

- 05 To increase the cylinder temperature, press +, to reduce it press -. We recommend setting this to 50C.
- 06 Note the unit's priority is hot water - if the cylinder falls 5C in temperature, it will automatically re heat. It cannot do heating and hot water at the same time so in hot water mode the heating is stopped.






Lastly, please note the hot water in the cylinder needs to heat up to 60C once a week to prevent Legionella and the immersion heater in the hot water cylinder is programmed to do this.
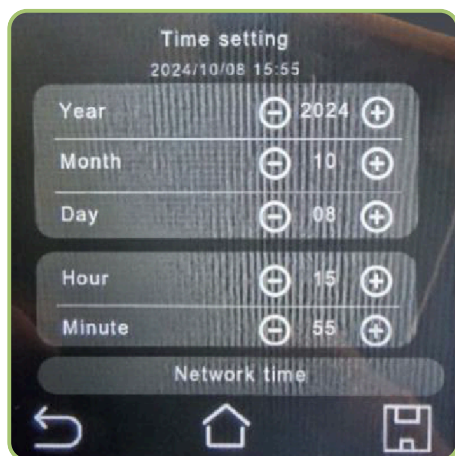
## 06.

# Setting The Clock, Controller and Timers




 


 
## Clock

- 01 Press Menu .
- 02 Then press Schedule .
- 03 Then press Timer .
- 04 Now, adjust year, month, day, hour and minute.
- 05 Press the floppy disk  to save, then press home  to exit.



 


## Controller

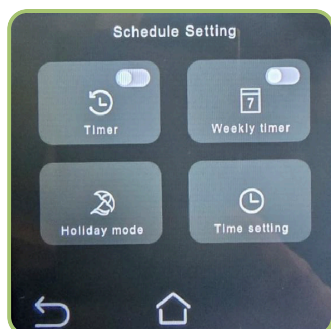- 01 Press Menu .
- 02 Press Display .
- 03 In this screen, you can adjust the brightness, sound level and how long the screen stays on after being touched
- 04 Press the floppy disk  to save, then press home  to exit.

 
 


## Timers

- 01 Press Menu .
- 02 Press Schedule . Press .
- 03 Set the top timer (Timer 1) first.
- 04 Note you can have as many timers as you need (Timer 1, Timer 2 etc.).

Each timer can have heating or hot water or both. In the above example, note the top timer is active and so is orange (use the slider to activate (or deactivate) it) and is for both heating and hot water.



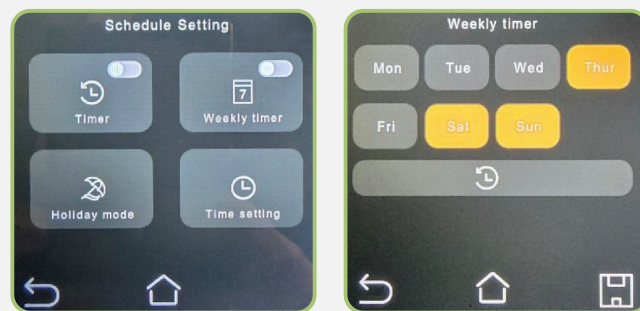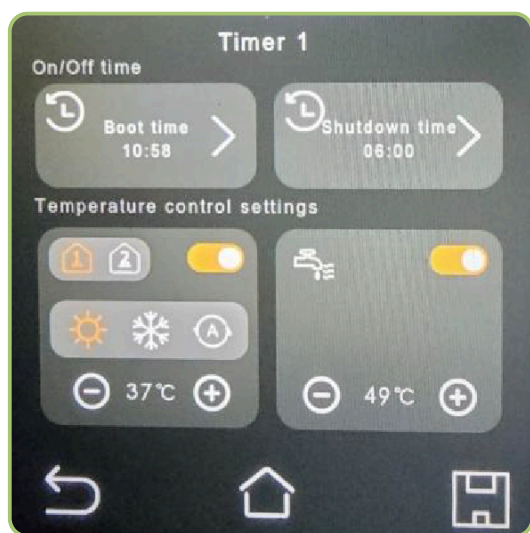 


If you want to have different timers on different days, go to **Schedule Setting** and press the **Weekly timer** and you will be able to set times by each day of the week.

**To adjust each timer simply select it.**

- 01 You can adjust the start or boot time, the shutdown or off time.
- 02 Note which zone of heating you are controlling – in the above it is Zone 1 .
- 03 Make sure it is on heating - it shows a sun symbol not an icicle .
- 04 Set the temperature you want to achieve.
- 05 Likewise you can turn on the hot water and set its temperature too.
- 06 Press save before exiting.

## 07. Checking Performance

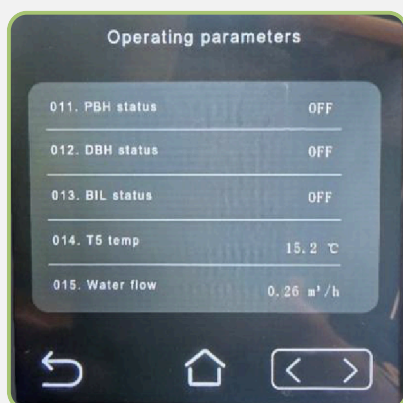

### Energy Consumption

- 01 Press Menu , then press Consumption .
- 02 At the top is the instantaneous energy consumption, this is best ignored as it varies all the time.
- 03 Below it however is the total energy the unit has consumed since new, the heat it has produced and the COP (Coefficient Of Performance). The COP indicates the system's efficiency - if your COP is over 3 that's good, over 4 is amazing.

- 01 Press menu then press Setting .
- 02 Press **Operating parameters**.
- 03 003 Sv3 is the position of the 3-Way Valve  
● off = heating ● on = hot water
- 04 Look at 014 T5, this is the flow temperature.
- 05 Look at 015 water flow, this is the flow rate.

### Flow rate reference:

| Unit         | Flow Rate Ideal |
|--------------|-----------------|
| Ecogen290-5  | 1.2 m³ per hour |
| Ecogen290-8  | 1.6 m³ per hour |
| Ecogen290-11 | 2.4 m³ per hour |

If the system detects a problem, a fault or error code will show in the bottom left of the controller, for example, F05 in the below:

 



F05 is one of the most common fault codes and means that the water is not moving quickly enough around the system. This could be because the filters are dirty, there is air in the system or there is not enough water pressure. Have you recently bled the radiators? If so, this could be the cause of the fault code appearing, and you must top up the pressure in the system. Check all of the above and restart the unit to see if the fault code has disappeared.

## How do you clear a fault code after the fault has been rectified?

Some faults can be cleared by switching the controller off and on again. If this does not work, reset the power, switch it off for 15 seconds, then switch it on again.

In the event that you cannot rectify the problem and the fault code remains on the display, we suggest you call your installer who will be able to advise you on the appropriate next steps.

To see a full history of the fault codes that your unit has reported, press menu  then press Setting  and **Fault code**.

Other non-fault code problems that may occur with your heat pump system include:

- There is no display on the controller - check that the 32 Amp isolator outside is switched on and check if any fuses have tripped. Once the power is restored to the controller, it will return to its last settings.
- There is no hot water or heating - make sure the heat pump is switched on at the remote controller. If it is off, the heat pump cannot heat the water or the house.

For a full list of fault codes, their meaning and recommended actions, please see

<https://ecogenica.co.uk/products/>

## 08.

# Warranty

**Ecogenica offers two warranties:** Standard Cover, which is included in the purchase price of the heat pump unit, and Premium Cover, which can be purchased for an additional £200.

Both warranties cover only the heat pump and controller. They do not cover installation errors, pipework, radiators or underfloor heating in the house.

All the accessories that come with the unit (cylinders, valves, switches and pumps) are covered by a two-year, parts-only (no labour) warranty. If these parts fail, they will be replaced free of charge under warranty, but the installer will charge to diagnose, remove and fit them.

It is important that you decide at the time of purchase which of the two warranty options for the heat pump and controller you would like.

The warranty of choice will be registered with Ecogenica by the installer.

Once the warranty level is chosen and registered, it is not possible to up/downgrade.

Under both Standard and Premium warranties, the installer who installed the unit attends the site to service the unit and rectify any problems.

If an installer cannot be located, Ecogenica will send a service engineer within the next 7 days.

If there is a problem with the unit, the installer can call Ecogenica from the site to report the fault and ask for help if so required.

## Registration Process

The installer must submit photos of the installation as part of the warranty registration process (see details on the following page).

This enables the Ecogenica technical support engineers to ensure the quality of the installation and to advise the installer on any changes that may need to be made, thereby reducing the chance of performance issues, faults or problems that will require the installer to return to the site.

The installer can email these photos or WhatsApp them to the Ecogenica technical support team, where they will be held on file.

This registration process has been designed to be much simpler and quicker than the industry standard, which involves filling in a form, scanning it and emailing it in.

If the photos are not acceptable, the installer will be asked to re-take and re-submit them.

Warranty cover will only be activated once these photos have been submitted to the required quality and no issues are detected.

Any changes required will require the submission of new photos showing that those changes have been made.

### The photos must show the:

- 01 Sticker/label on side of the unit stating model type, date of manufacture etc.
- 02 Outdoor unit installed including feet.
- 03 Drainage area for the unit.
- 04 Pipework behind the unit.
- 05 Hot water cylinder.
- 06 Heat pump controls wiring.
- 07 Pipework going to the cylinder.
- 08 Weather compensation curve setting on the controller.
- 09 Hot water setting on the controller.

Each unit comes with a 2-year warranty, but this can be upgraded to a 7-year warranty for a fee of £200 payable when the heat pump is purchased. Details of each type of cover are as below:



## Standard Cover ↘

- ✓ The warranty covers the cost of the parts, and there is a fixed labour allowance for repairing the unit depending on the work to be undertaken.  
**For example**, for a compressor the allowance may be £150, whilst a fan motor receives £50. This will be irrespective of travelling distance or time.
- ✓ The allowance will change over time so updated details will be available on request.
- ✓ The installer is responsible for deciding if they will pass this charge on to you.
- ✓ Warranty spares come directly from Ecogenica, and the aim is to deliver within 24 hours.
- ✓ A visit from an Ecogenica service engineer is charged at £600 a day, paid by the installer pre-visit.
- ✓ Ecogenica will refund the fee if the problem is directly attributable to the heat pump, not leaking radiators, etc.

## Premium Cover ↘

- ✓ For £200, the warranty cover can be extended to 7 years from the date of delivery to the site.  
In addition, Ecogenica offers a performance guarantee that a **technical support engineer will call the installer back within 15 minutes during office hours**.
- ✓ Ecogenica will pay for all parts and a fixed labour allowance during the 7-year warranty using a fixed labour charge (see Standard Cover).
- ✓ Every spare part for the unit is kept in stock and can be shipped anywhere in the UK the next day with DPD tracking.
- ✓ When an installer installs their first Ecogenica unit, Ecogenica will provide a bookable free video call to help with the commissioning. The installer simply pre-books a time with our technical support team and they will call the installer at the agreed time to talk the installer through the commissioning process, which should take approximately 30 minutes.
- ✓ Ecogenica will also provide the installer with a video that can be watched on-site to explain the commissioning process.
- ✓ A visit from an Ecogenica service engineer is charged at £450 a day and is guaranteed within 3 working days of the fault being reported. The installer must pay the £450 pre-visit. The service engineer will meet the installer on-site to assist in repairing the unit and fixing any problems on-site.
- ✓ Ecogenica will refund the fee if the problem is directly attributable to the heat pump, not leaking radiators etc.
- ✓ The installer is responsible for deciding if they will pass this charge on to you.

## 08.

# Maintenance

The heat pump should be serviced **ONCE A YEAR** to comply with the warranty.

The installer should provide you with evidence of all servicing so that you can keep a log in the event of any warranty claim.

 
Maintenance should be covered by the installation contractor. If the installer is not available, another Ecogenica-qualified contractor can take over the maintenance and warranty.

### The annual service should include the following:

- |  |  |
|--|--|
| <b>01</b> Stop the unit, clean the Magnetic Filter and replace the strainer.   | <b>05</b> While running, check the outdoor unit for damage and debris.   |
| <b>02</b> If Glycol or an anti-freeze is in the system, test the level using a Glycol tester - the level should be 25%. If you don't have a glycol tester, a glycol tester/refractometer can be bought from your heat pump supplier or online.   | <b>06</b> Clean the coil. We recommend using an approved air conditioning or heat pump cleaning chemical - your distributor will stock this. Instructions are given on the bottle.             |
| <b>03</b> Refill the unit, pressure should be 0-3 bar, then open all valves.   | <b>07</b> Clean and polish the outside casing - we recommend car wax or ACF50 to do this.  |
| <b>04</b> The operation of the unit against the hot water cylinder needs to be tested. First, draw off 50 litres of water - run a couple of taps for 5 mins to achieve this. The unit should start up automatically in hot water mode, but if it does not, press the DHW power button on the controller. In 3-4 mins it will start heating the cylinder, and a compressor symbol will show at the top of the remote controller. The heat pump should be able to achieve 50C cylinder temperature without using the immersion heater. | <b>08</b> Measure the temperature of the flow using the remote controller (See Section 10).  |
|  | <b>09</b> Measure the flow rate from the flow meter (See Section 10).  |
|  | <b>10</b> With the unit running flat out, measure the air temperature as it enters the coil and the air in the garden. They should both be the same. Check that cold air is not recirculating. |


# 08.

 
## Wi-Fi App

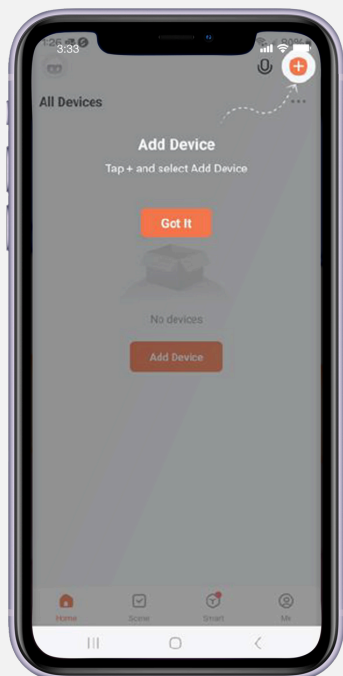

 
The App is called **TuyaSmart** and can be found on the App Store or Google Play.


Once downloaded you need to find your heat pump.

- 01 First turn the power off  to your heat pump for 30 seconds – it is only in pairing mode after the power is restored.
- 02 On the App start searching for a new device by pressing the orange +.

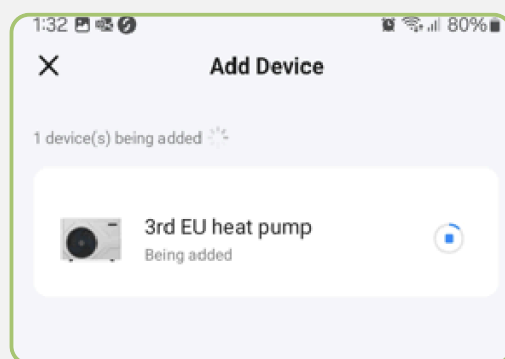

The App will now show you a list of the units it can see. You are looking for a 3rd EU heat pump.

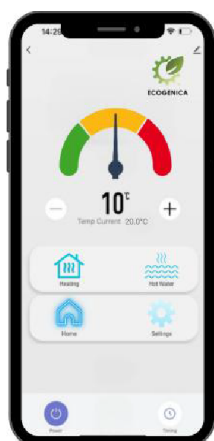

**Important:** On the heat pump controller, press , press Wi-Fi then **Reset**.

Once you have successfully paired the unit to the phone, click on it. Now enter the Wi-Fi password and hold your phone near the heat pump so it will be added to the network.

The App will search again, and once it is found, press Done.

Then you are away and can start, stop, set temperatures, etc.

## Our Journey



Our journey started in Australia over ten years ago, and we are now the leaders in the Australian heat pump market, having installed heat pumps in over 200,000 homes and businesses.

We have a dedicated research, development and manufacturing facility and a wealth of talent and experience in developing innovative, sustainable, renewable energy technology systems.

## Our Vision



Our vision is to create a greener and cleaner world by using heat pump technology to deliver a more reliable, efficient, and affordable hot water and heating solution. We aspire to become the global leader in providing cutting-edge heat pump systems, offering homeowners the most energy-efficient and cost-effective solution to their heating and hot water needs.



Should you have any questions or require further information or support, please do not hesitate to contact us at:



[info@ecogenica.co.uk](mailto:info@ecogenica.co.uk)



+44 808 273 5159



Unit 4 Orton House Farm | Norton Lane  
Orton-On-The-Hill | Atherstone CV9 3NR